


Kaptive Guide for accessing the IP address

Note: Kaptive needs to have an active Ethernet connection of 2.4Ghz for connectivity.


Step 1: Press the control panel button for more than 10 seconds, till the led light starts blinking red and green.



Step 2: Now go to your PC Wifi settings and connect to Kaptive's Wifi, whose SSID will be named as per the 6 digit code on the Kaptive Camera.

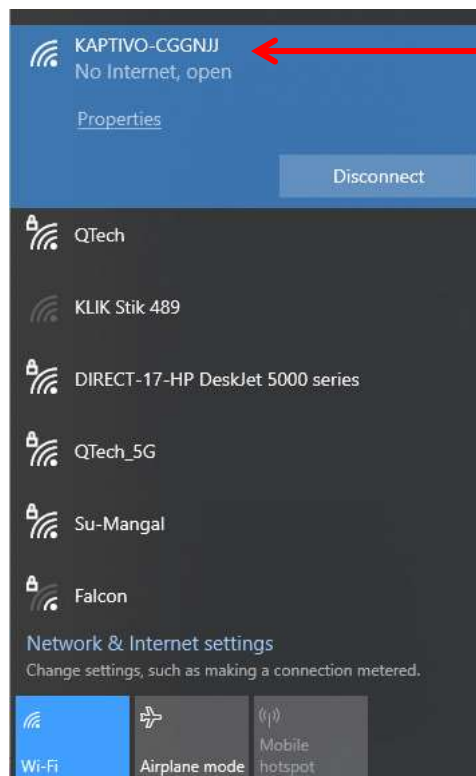


Step 3: Once you are connected to Kaptivo's Wifi, go to the properties section of that Wifi and check the IPv4 address, put that same IP address in your Web Browser.

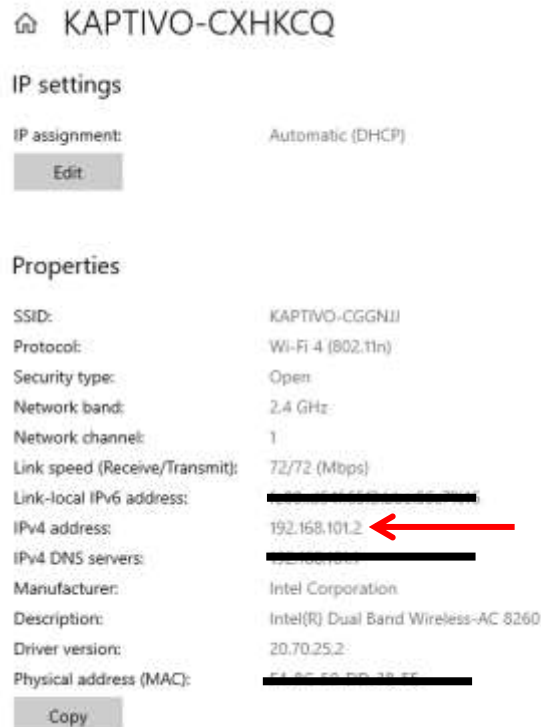


Step 4: You will now be able to access Kaptivo's Admin Panel.


Default ID and Password is **Admin**.

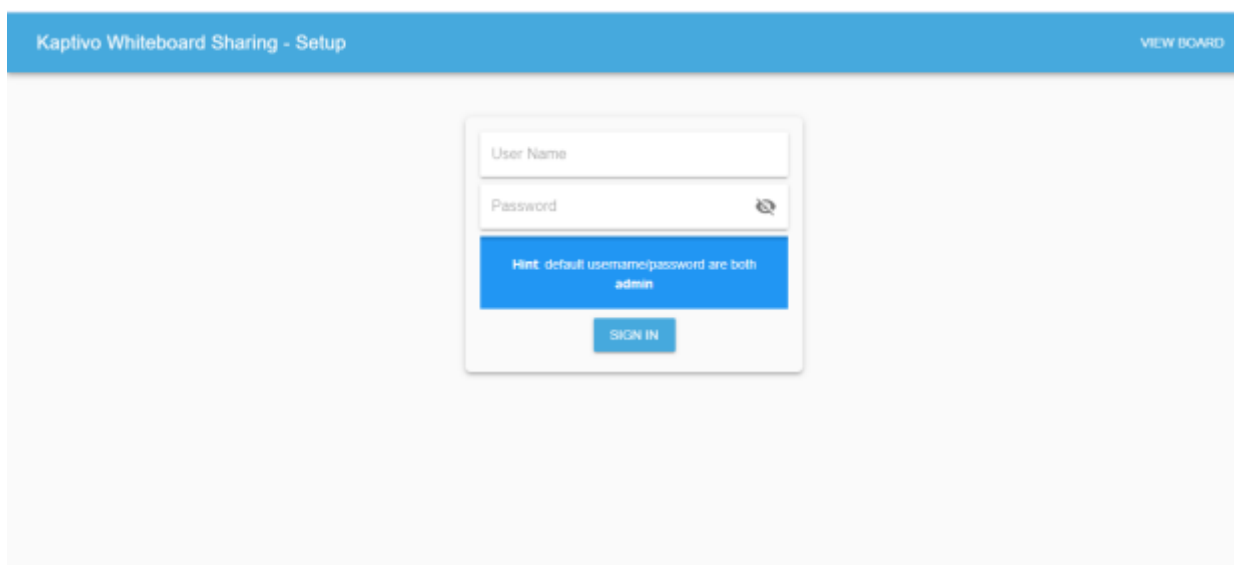


Step 5: Once you have connected to the admin panel of your Kaptivo, you can change the Network Settings as per your convenience, so that you can access the Kaptivo later without using all these steps and just by adding the static IP address in your web browser directly, that you can set from the network configuration of Kaptivo's Admin Panel.

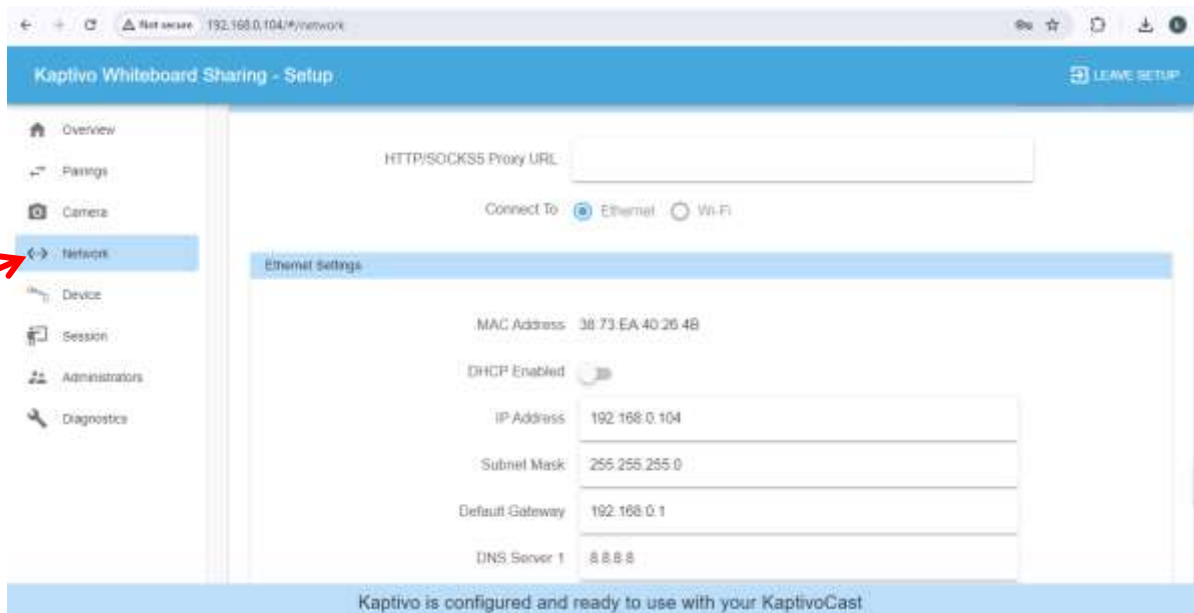

Step 6: Do not forget to save your settings after doing the changes.

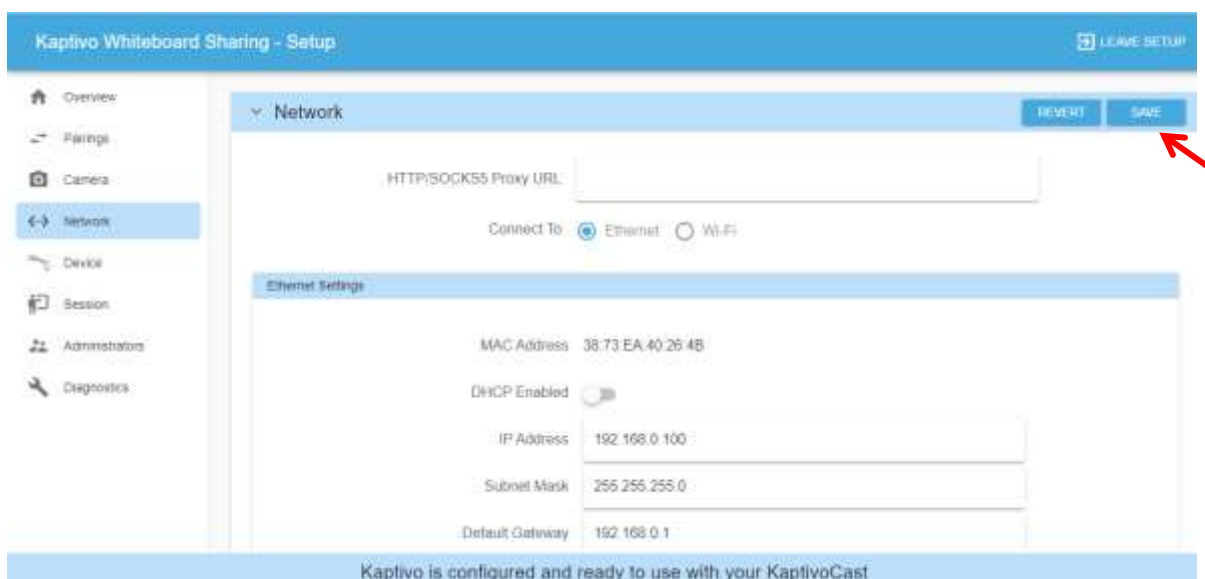

Step 7: After clicking on save, please select YES to confirm reboot.

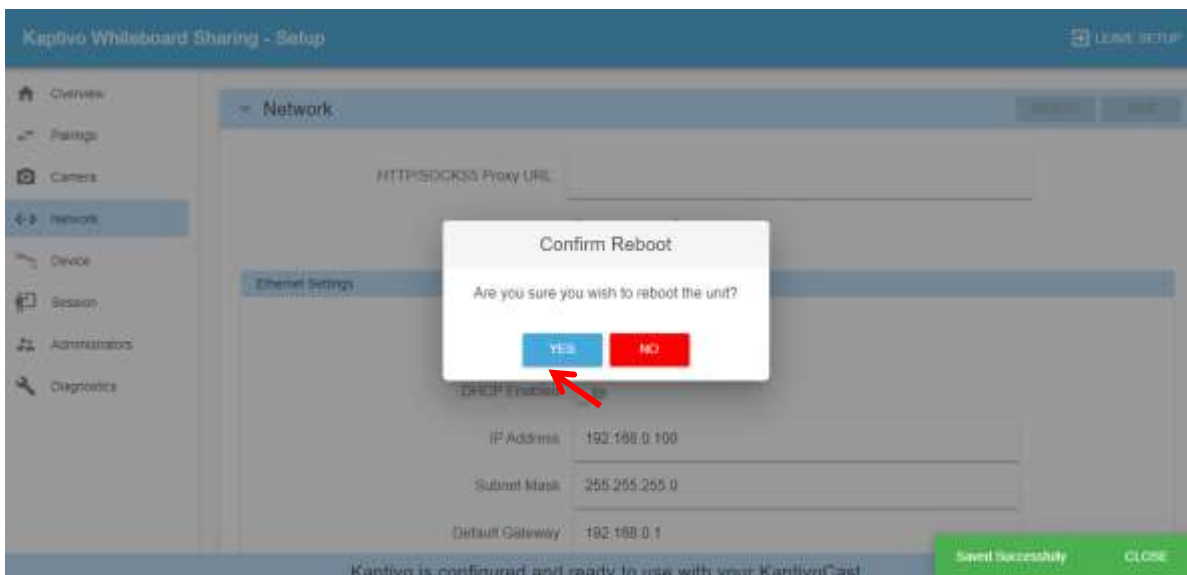

Step 8: Once rebooted, open any web browser and enter the IP address that you have set for your Kaptive. Your Kaptive 6 digits ID will be automatically visible on the screen. Then enter your name and your VIEW BOARD button will get highlighted in blue.

Click on VIEW BOARD to proceed ahead.

Note: Ignore the error below highlighted in red.



Step 9: After clicking on view board, you will be redirected to the page below, click on the blue blinking button on your Kaptivo control panel to go live.



You will now be able to view you whiteboard live in real time on your web browser.

